


Operating Instructions Manuel d'utilisation 取扱説明書

Replacement filter **Commercial Use**

Filtre de remplacement **Utilisation commerciale**

交換用フィルター **業務用**

Model No. **ET-RFE16**

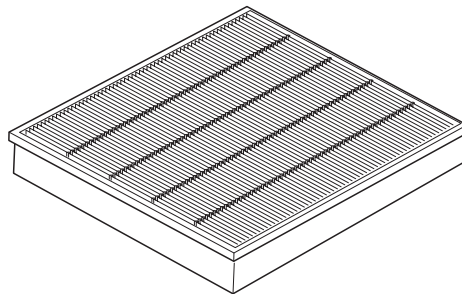

Thank you for purchasing this Panasonic product.

- Before using this product, please read the instructions completely and save this manual for future use.

Nous vous remercions d'avoir choisi ce produit Panasonic.

- Avant toute utilisation de ce produit, merci de lire attentivement les instructions et conserver ce manuel afin de pouvoir s'y référer ultérieurement.

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。

- この「取扱説明書」とプロジェクターの「取扱説明書」をよくお読みのうえ、正しく安全に作業を行ってください。そのあと大切に保管してください。


Replacement of the air filter

1) Turn off the power and remove the power plug from the outlet.

- When turning off the power, make sure to follow the procedures of “Powering off the projector” described in the operating instructions of the projector.


2) Pull out the air filter unit.

- Use a Phillips screwdriver to turn the screws counterclockwise until they turn freely, and then remove the unit.

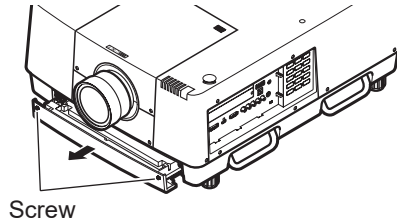


3) Remove the holder.

- Loosen the three screws on the holder (A, B), slide the holder in the direction shown by the arrow in the image, and lift up to remove the holder.

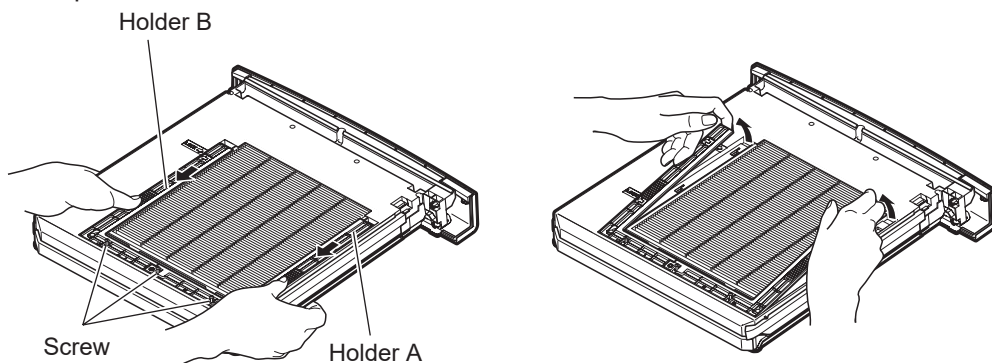

4) Remove the air filter.

- Hook your fingers in the slot to lift up and remove the air filter.

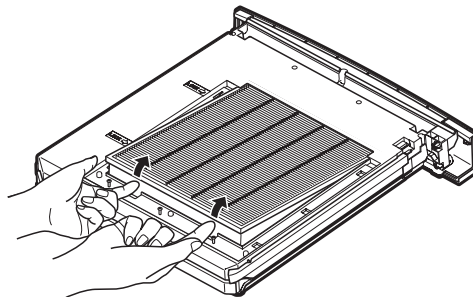

5) Attach the new air filter.

- Inserting the new air filter by slowly sliding it will make it easier to attach.
- The side with the sponge must be the top. Attaching it with the wrong side up or forcing it to attach will cause the air to leak in. The air filter does not work fully and as a result, dust will get into the projector.

6) Attach the holder.

- Place the holder (A, B) on top of the filter.
- Slide the holder so that its arrows line up with the arrows on the unit, and attach the holder.
- Tighten the three holder screws.

7) Attach the air filter unit to the projector.

- Perform step 2) in the reverse order.

8) Connect the power plug to the outlet, turn on the power, and then perform [Filter counter reset].

- For details, refer to “Resetting the value of [Filter counter]” (➡ page ENGLISH-2).

Attention

- When attaching the unit, make sure that the projector is stable. Perform the attachment in a safe place where the projector will not be damaged even if you drop the air filter unit.
- After replacing the air filter, reset the filter counter. Otherwise the power of the projector may be turned off for safety.
- After attaching the air filter unit, be sure to tighten the screws. If not, the air filter unit may drop off while projecting.

Resetting the value of [Filter counter]

After replacing with the new filter, be sure to reset the counter.

- 1) **On the menu screen, select [Setting] from the main menu.**
- 2) **Press the <SELECT> button.**
 - The sub menu is displayed.
- 3) **Press ▲▼ to select [Filter counter].**
- 4) **Press the <SELECT> button.**
 - The sub menu 2 is displayed.
- 5) **Press ▲▼ to select [Filter counter reset].**
- 6) **Press the <SELECT> button.**
 - A screen for confirming whether to reset is displayed.
- 7) **Select [Yes], and press the <SELECT> button.**
 - The confirmation screen is displayed.
- 8) **Select [Yes], and press the <SELECT> button.**

Note

- Reset only when replacing the filter.
- When resetting, the display of [Filter warning] disappears.

Environment care information for users in China



This symbol is only valid in China.

Product information (for Turkey only)

AEEE Yönetmeliğine Uygundur

Panasonic Projector & Display Corporation

Web Site : <https://docs.connect.panasonic.com/projector>

パナソニック プロジェクター&ディスプレイ株式会社

〒 571-8503 大阪府門真市松葉町 2 番 15 号 電話 ☎ 0120-872-601