


# PT-VMZ-AVCART

## Projector Installation



1. Lock the wheels and open the front door

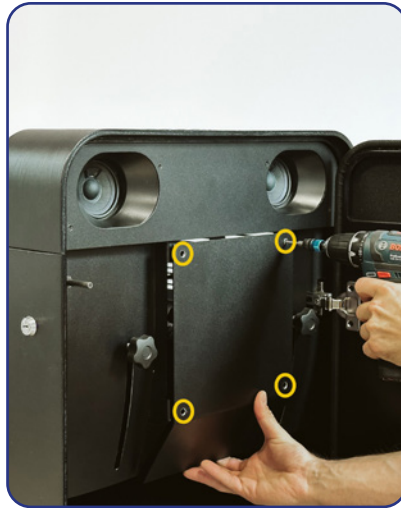

2. Unscrew the projector cable cover (HEX3)




3. Lock the angle adjustment to the Bottom position



4. Open the lens latch. Remove the back cover (HEX4) and disconnect the pass-through cables



5. Remove the projector's front leg (Skip this if VMZ7ST or VMZ6ST)

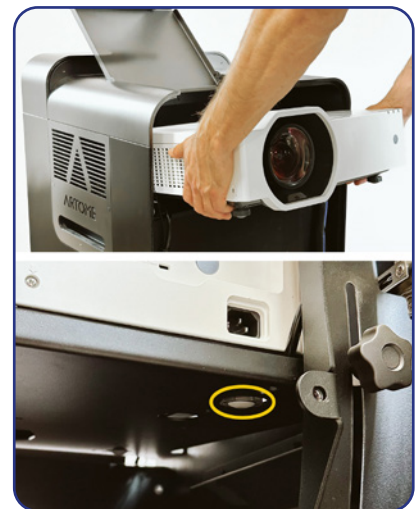

6. Carefully slide in the projector and align the back legs with the alignment holes

# PT-VMZ-AVCART

## Projector Installation



7. Attach the cables to the projector. The cables are labeled for correct positioning



8. Secure the projector with four thumb screws: Use holes 1 (default)  
Use holes 2 for VMZ6ST/7ST



9. Install the back cover and connect the pass-through cables. Close the lens latch.



10. Install the cable cover and close the front door



11. Connect the power and turn on the unit



Wait 2 minutes for automatic configuration. The device turns off when ready.

For Visual Systems Technical Support, please call 1-855-772-8324  
or email [projectorsupport@us.panasonic.com](mailto:projectorsupport@us.panasonic.com)



# ARTOME