

Artome Remote Controller User Guide




Basic Operations

Common Issues and Solutions

Initial Pairing Instructions

Battery Replacement Instructions

Specifications

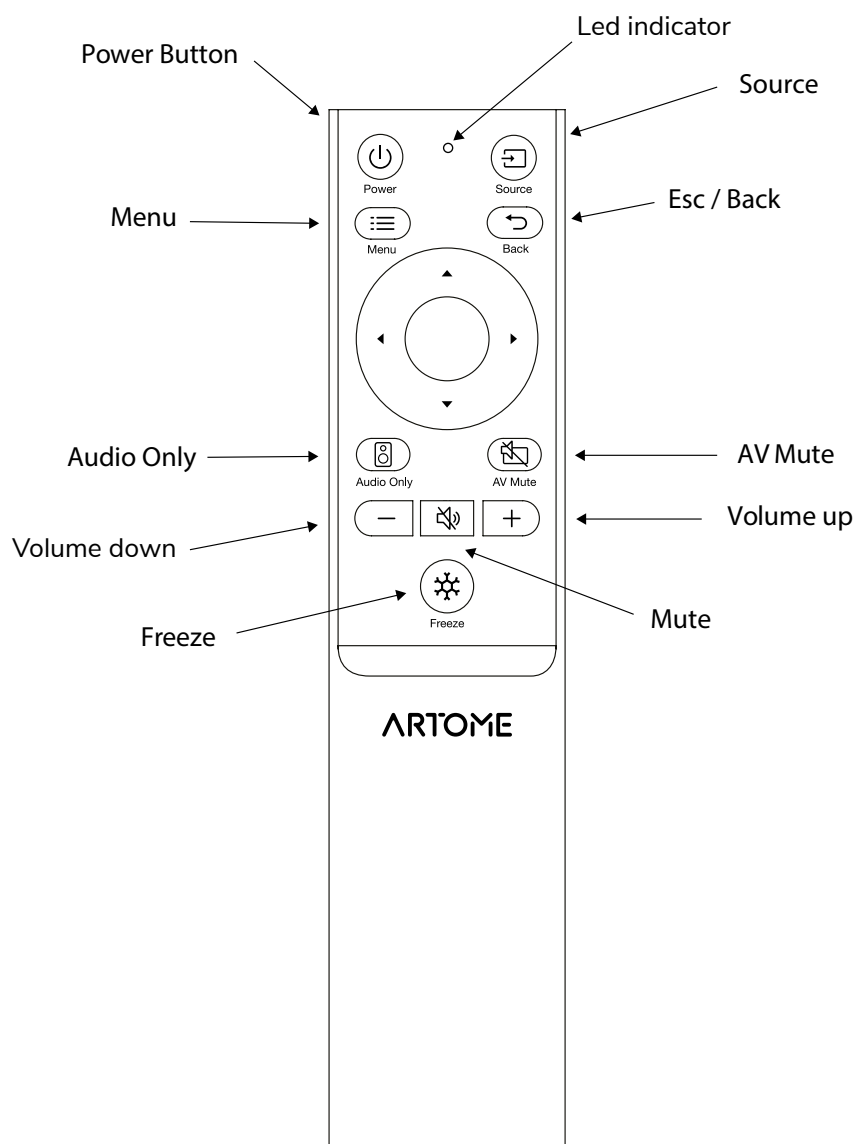

Basic Operations:

Power On/Off	Use the power button to turn the Artome unit on or off.
Source	Select the input source.
Menu	Access the projector menu.
Esc / Back	Go back or exit the current projector menu.
Volume Control	Adjust the volume using the + and - buttons.
Freeze	Freeze the video while allowing the audio to continue.
Audio Only	Switch to audio-only mode.
AV Mute	Press the AV Mute button to mute both audio and video.

Introduction

The Artome unit can be conveniently controlled using a remote controller. This remote communicates with the Artome unit via Bluetooth. Only one remote controller can be connected to an Artome device at a time. The remote controller should not be replaced unless it is lost or damaged. The remote controller is already paired with the Artome unit at the factory, so the user does not need to pair it again.

Common Issues and Solutions

Artome not powering on with the first press of a button:
If the remote and Artome haven't communicated recently, the first button press will be lost as the remote initiates a connection. This takes about 1 second. Subsequent presses will be registered. If the Artome unit is always powered, the remote keeps the connection open, eliminating delay.
Remote Controller Not Working:
Ensure the batteries are properly inserted to the remote and have sufficient charge.
Ensure the Artome unit is plugged into the power socket.
Ensure the Artome unit is functioning by pressing the buttons on the unit itself
If the remote controller is set into pairing mode again by pressing the Audio Only and AV Mute buttons for 5 seconds, the remote will erase its pairing information and attempt to create a new connection. This will fail. To resolve this, set the remote into pairing mode again by pressing the Audio Only and AV Mute for 5 seconds. After this second pairing attempt, the remote will start working again.

Note: If the Artome unit has been updated or reset to factory settings, the remote controller may need to be paired again. Follow the initial pairing instructions to perform the pairing. If this does not resolve the issue, contact customer support.


Initial Pairing Instructions (After factory reset)

Set Artome unit in Pairing Mode:

Press and hold the **Pause** button on the Artome unit for 2.5 seconds.
The Pause LED will flash, indicating that the Artome is in pairing mode and ready to listen for advertising remote controllers.

Set the Remote Controller in Pairing Mode:

Press and hold both the **Audio Only** and **AV Mute** buttons on the remote controller simultaneously for about 5 seconds. Once the remote controller is connected to the Artome, the **Volume +** and **Volume -** LEDs on the Artome unit will illuminate for 2 seconds.

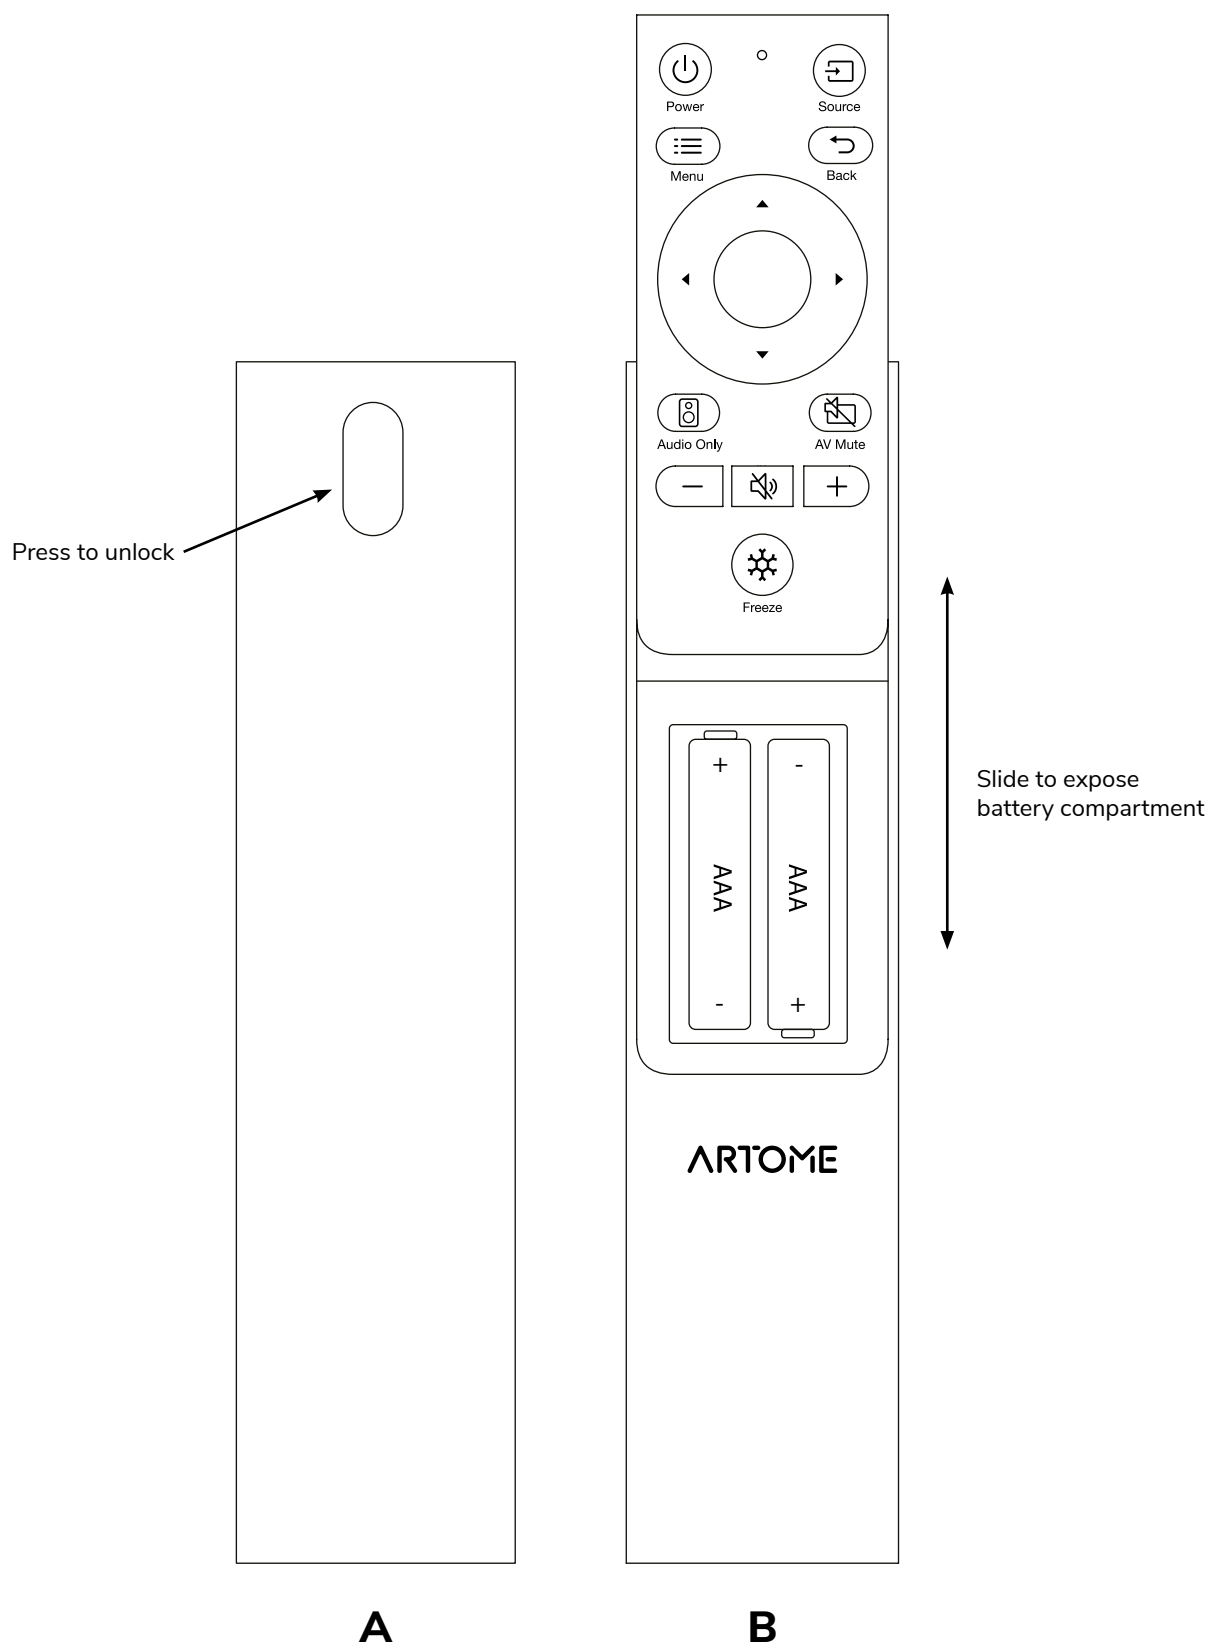

Battery Replacement Instructions

To ensure your Artome remote controller functions correctly, you may need to replace the batteries periodically. Follow the steps below to replace the batteries.

Locate the Button to Open the Remote

On the backside of the remote (image A), find the button and press it firmly to release the back cover of the remote. Once the button is pressed, slide the back cover down to expose the battery compartment.

Remove Old Batteries and Insert New Batteries

Take out the old AAA batteries from the battery compartment. Insert two new AAA batteries, ensuring that the positive (+) and negative (-) ends are aligned correctly as indicated in the image B.

Replace the Back Cover

Slide the back cover back into place until it clicks securely.

Test the Remote

Press any button on the remote to ensure it is working correctly.

Specifications

Feature	Specifications
Material	Aluminum and plastic, silicone buttons
Width	1.42 inches (36 mm)
Height	6.26 inches (159 mm)
Thickness	0.51 inches (13 mm)
Connectivity	Bluetooth
Power Source	Two AAA batteries (included)
Range	Approximately 32-39 feet (10-12 meters)
Features	LED indicator
Compatible Products	Artome X10 (PT-VMZ-AVCART) Artome S1, Artome M10, and Artome X20

For Visual Systems Technical Support, please call 1-855-772-8324
or email projectorsupport@us.panasonic.com or prodisplaysupport@us.panasonic.com