WX-SZ600P Firmware version upgrade instructions

Introduction

This manual applies to the following version of MicCC.

* Since April 2024, Operations Support Software has been integrated into its successor, MicCC.

* The application name of Microphone System Configuration Center was changed to MicCC starting from version V3.0.0.0.

Make sure to use the following version of MicCC when upgrading the device firmware.

MicCC: V3.0.0.0 or later

* If you are currently using the earlier version of MicCC (or Operations Support Software), please install the above version. (Uninstalling the previous version is not required.)

This manual refers to the wireless microphone charger (WX-SZ600P) as "Charger."

Changes

Refer to the release notes for the changes in this version.


If Charger is already on the latest version, no firmware update is required. (Refer to the table below for the latest version.)

Applicable firmware and latest version

Product/model number	Application
Charger / WX-SZ600P	V2.00R00

Firmware upgrade procedures

Please follow the procedure below to perform the version upgrade.

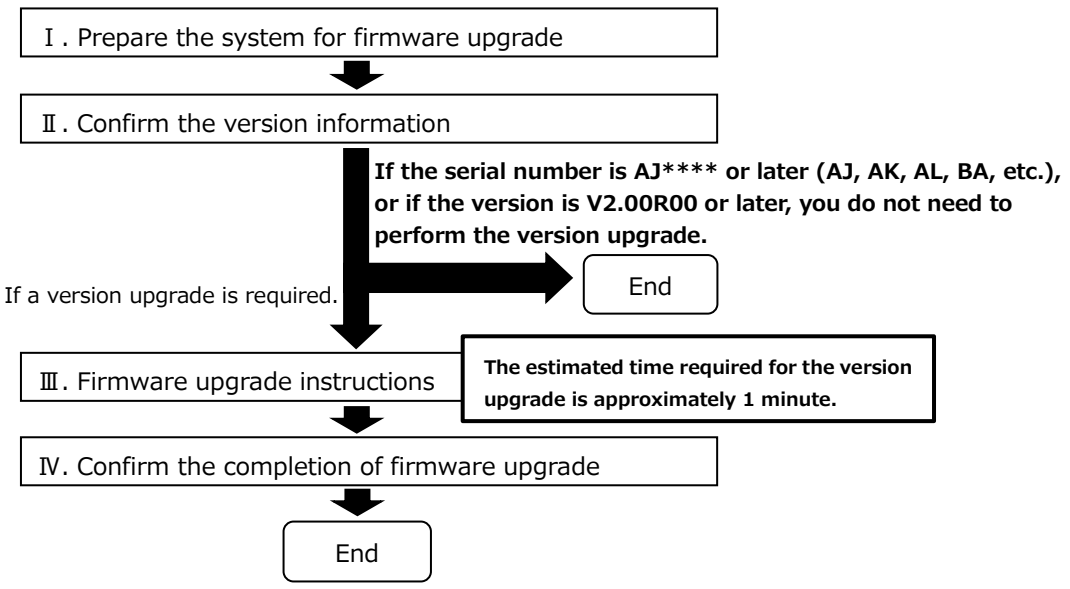

I. Prepare the system for firmware upgrade

The following items are required:

- PC
- LAN cable
- Charger
- MicCC (V3.0.0.0 or later)

  MicCC can be downloaded from the following URL.

  URL: https://connect.na.panasonic.com/av/audio/microphone-system-configuration-software


  Note: For installation instructions, see “How to install” in the manual.
- New firmware


  Charger Application ：WX-SZ600P_V2.00R00.bin

  The new firmware is stored in the folder.

■Instructions for connecting Charger and MicCC

1. Connect Charger to the PC as shown below while Charger’s power plug is unplugged. Then plug Charger’s power plug into a power outlet.

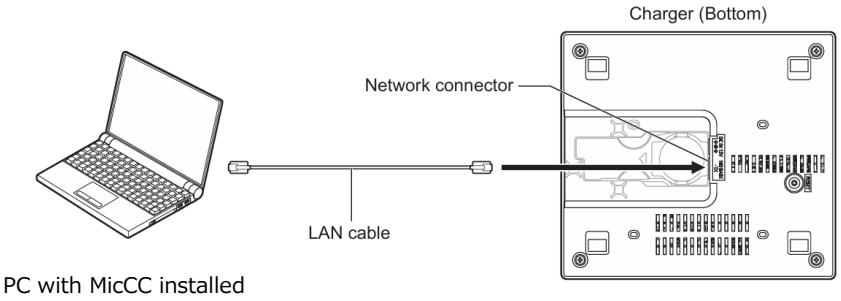

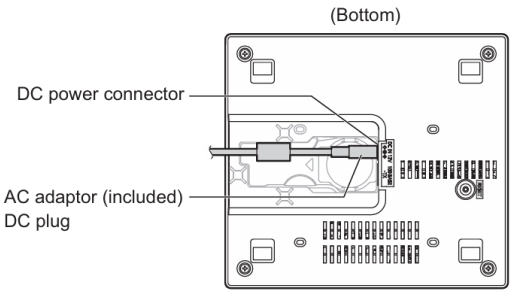


2. Log in to MicCC.

   The following user name and password are registered in the state immediately after installation.

   User name: Admin / Password: Admin12345


3. When [List] screen appears, click [System settings] button on the top left.

System Settings button

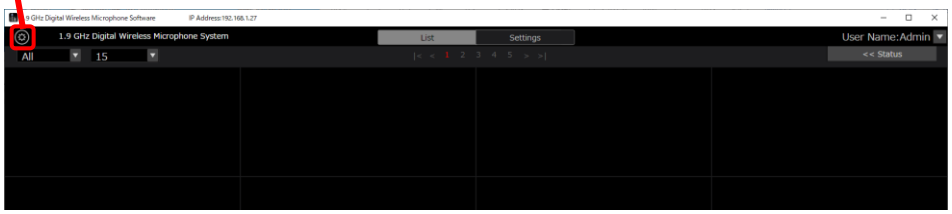


4. Click [Unit management] tab in the center of [System Settings] screen.
5. Click [Add unit] button to switch to [Unit management] screen.

Unit management Tab　　Add unit button

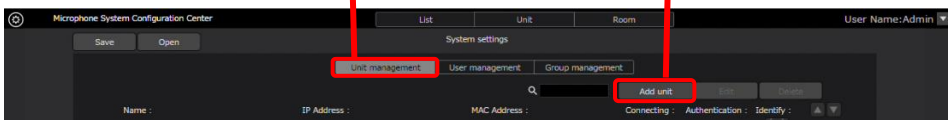


6. Click [Auto detect] button.

Auto detect button

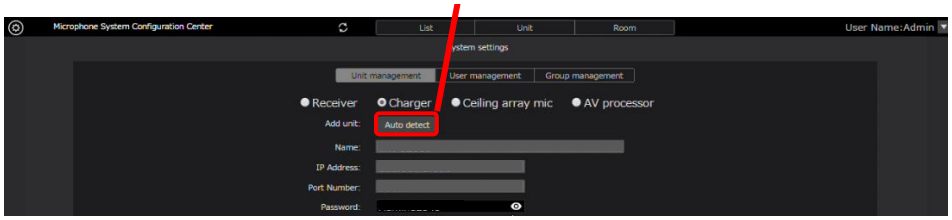

7. Select Charger and click [Network settings] button.

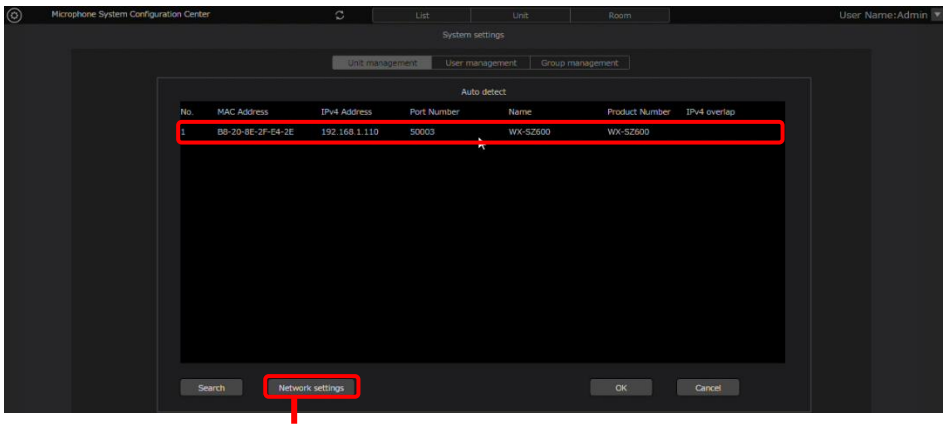


Network settings button


Note

For security purposes, automatic detection is only enabled for 20 minutes after Charger is started. Restart Charger if it does not appear.


8. If necessary, configure the network settings, then click [OK] button.

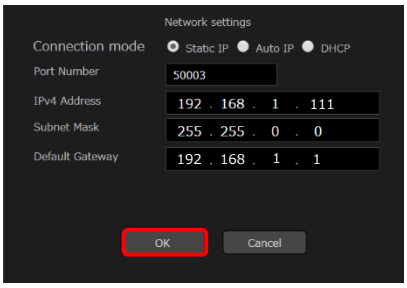

9. Enter the password set on Charger, then click [OK] button.
   If a password has not been set, enter a password to set on Charger.

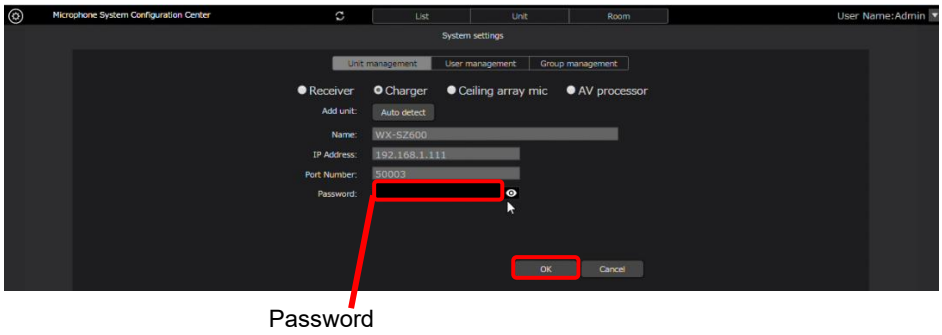

* If Charger password has not been set, re-enter the password set on Charger above, then click [OK] button.

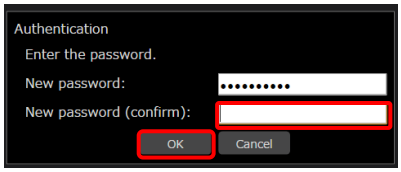


* Set a password of 8 to 16 characters with a combination of at least three types from uppercase letters, lowercase letters, numbers, and symbols.


This completes the procedures for connecting MicCC to Charger.

II. Confirm the version information

1. Click [Settings >>] button on the device where you want to upgrade the firmware.

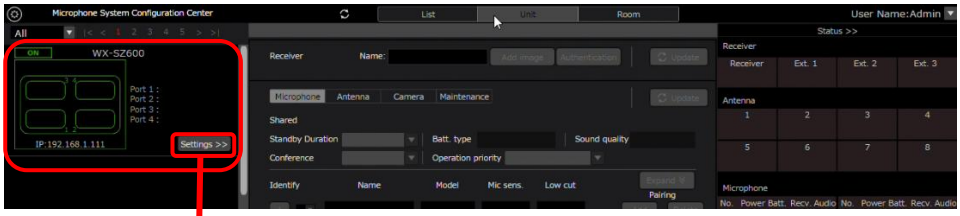

2. The version is displayed in [Application] field.

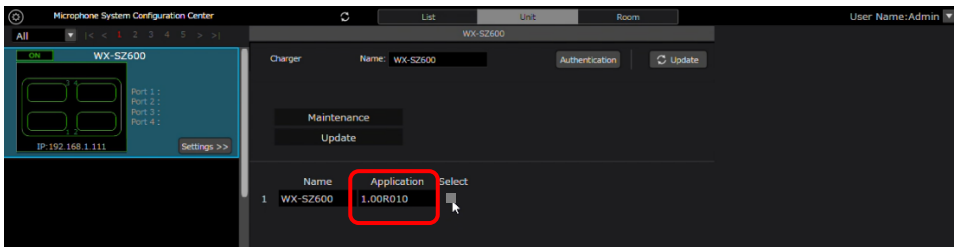


* The screen shows a firmware version example. It may differ from the version of your device.

If the version is earlier than 2.00R000, upgrade is required.

III. Firmware upgrade instructions

1. Select [Application] checkbox as the firmware upgrade target.
2. Click [Browse] button and select the upgrade file. Then click [Run] button.

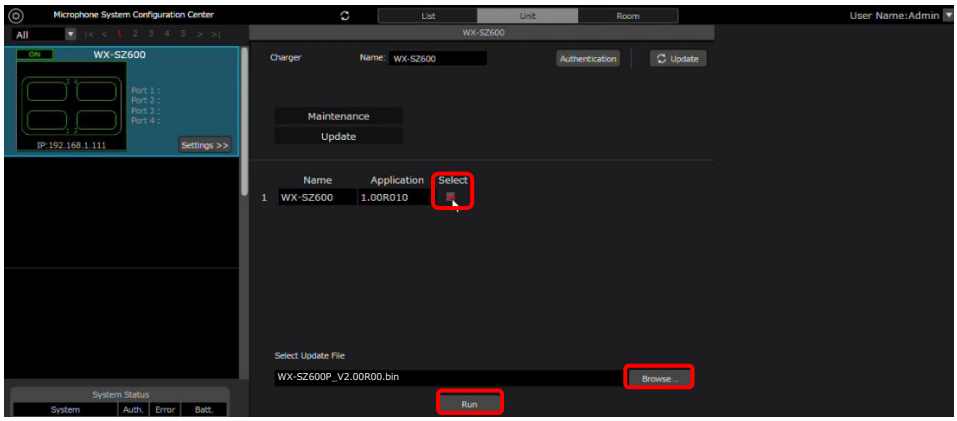

* The screen shows a firmware version example. It may differ from the version of your device.

Important

Performing any of the following actions during a firmware upgrade may cause the upgrade to fail.

- Removing/reinserting the AC adaptor of Charger
- Disconnecting/reconnecting the LAN cable
- Terminating MicCC


  If you do any of the above during the firmware upgrade process, restart Charger and start the firmware upgrade again.

3. The firmware upgrade begins. Click [Yes] button.



IV. Confirm the completion of firmware upgrade

Once the firmware has been upgraded, confirm the version information.

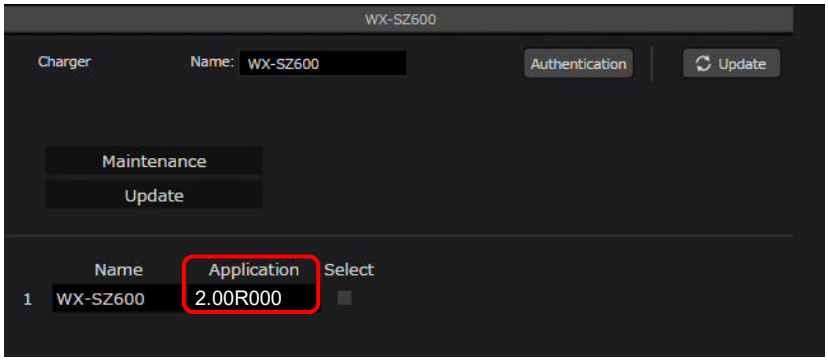

If the firmware version information has been updated to 2.00R000, the firmware upgrade is complete.

If the version information has not changed, please upgrade the target again.